
PRODUCED BY AN AUTODESK EDUCATIONAL PRODUCT


1

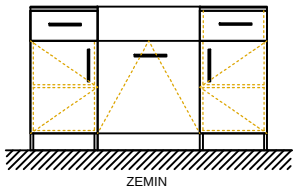

Alt tezgahı konumuna alınız.

Put the subtable into position.


2

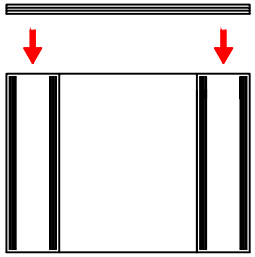

Ayna tablasını dik ve yatay konuma alıp, 3,5x50 vida ile Tac ın montajını yapınız

Position the mirror plate vertically and horizontally and mount the Tac with 3.5x50 screws.


3

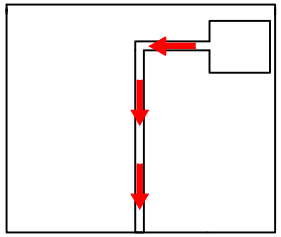

Aplik bağlantı saclarını bağlayınız. Kabloyu ayna arkasına salınız.

Connecting the applique connection sheets. The cable is released behind the mirror.


4

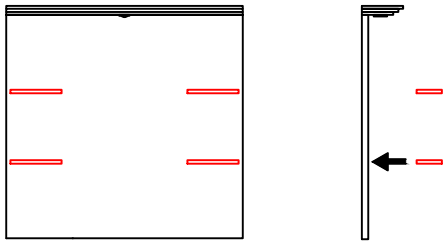

Ayna yan dekorların üzerinde bulunan raf deliklerinden rafları 3,5x50 vida ile monte ediniz.

Mount the shelves through the shelf holes on the mirror side decorations with 3.5x50 screws.

5

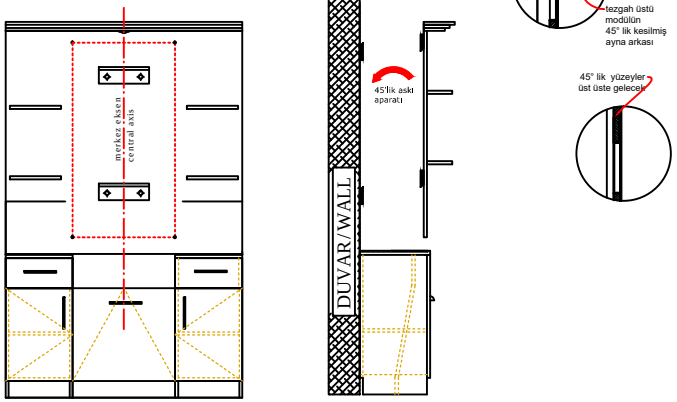

Askı 45 ler 2 Adet 6x80 vida ile duvara sabitlenir, ayna 45'lik askı aparatı ile asılır.

Hanger 45s are fixed to the wall with 2 6x80 screws, the mirror is hung with a 45' hanger.



ALPEDA®
YOUR SALON DESIGNER

30201000148 - BARLAS WOB BASIC ERKEK TEZGAHI_MONTAJ SEMASI

Tüm hakları FİLİZÇELİK AŞ.ye aittir.

PRODUCED BY AN AUTODESK EDUCATIONAL PRODUCT

PRODUCED BY AN AUTODESK EDUCATIONAL PRODUCT

PRODUCED BY AN AUTODESK EDUCATIONAL PRODUCT