
PRODUCED BY AN AUTODESK EDUCATIONAL PRODUCT

1



4 ADET KELEBEK MONTAJ APARATI /


4 PCS BUTTERFLY MOUNTING BRACKETS



Modüllerin her birini kelebek bağlantı yardımıyla 4x18 vidalar ile sıkınız.

Fix the cabinets to the lower part with 4x18 screws.


2

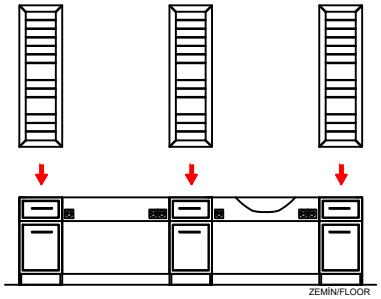

Dekorları komodinleri merkezleyip sabitleyiniz.

Center the decorative panels and nightstands, then secure them in place.


3

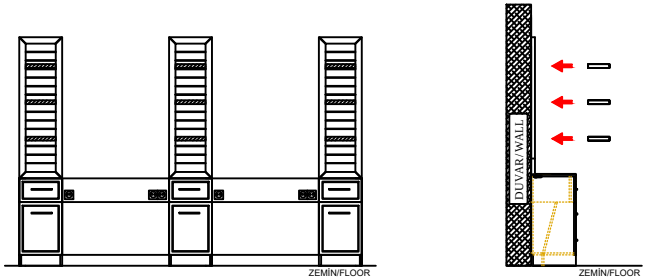

Ayna orta ahsabına rafları 3,5x50 vida ile monte ediniz.


Mount the shelves to the mirror middle wood with 3,5x50 screws.

4

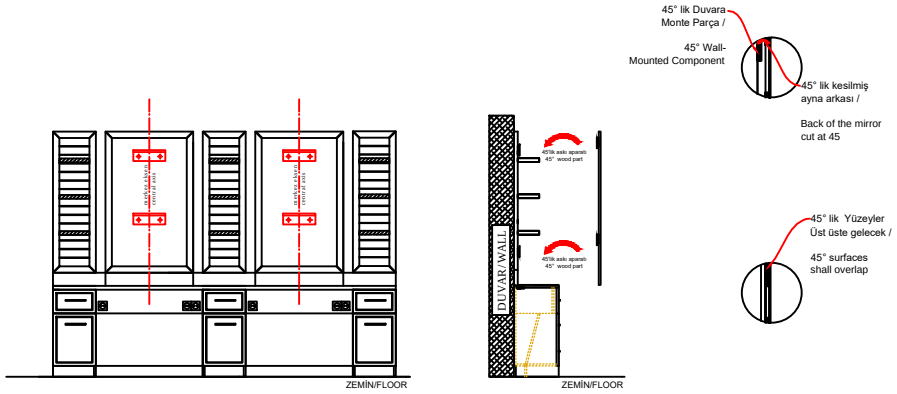

Ayna ahşabını, ayna monte yerlerinin altlarından duvara sıralı şekilde vida ile monte ediniz. Parça ile üst modülün 45° lik yüzeyleri üst üste oturtunuz. Aynaların montajı yapınız.

Mount the mirror wood to the wall with screws under the mirror mounting points. Place the 45° surfaces of the part and the upper module on top of each other. Install the mirrors.

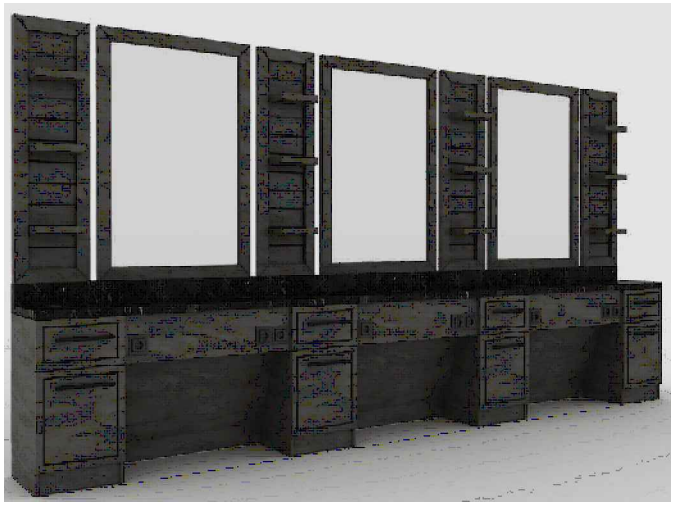

ALPEDA
YOUR SALON DESIGNER

ALTAIR WOB ERKEK TEZGAHI_MONTAJ SEMASI / ASSEMBLY DIAGRAM

ÖLÇÜLER : cm (santimetre'dir)
Çizim üstünden ölçü alınmamalıdır.
Measurements are in cm.

Tüm hakları FİLİZÇELİK AŞ.ye aittir.

PRODUCED BY AN AUTODESK EDUCATIONAL PRODUCT

PRODUCED BY AN AUTODESK EDUCATIONAL PRODUCT

PRODUCED BY AN AUTODESK EDUCATIONAL PRODUCT