
PRODUCED BY AN AUTODESK EDUCATIONAL PRODUCT

1




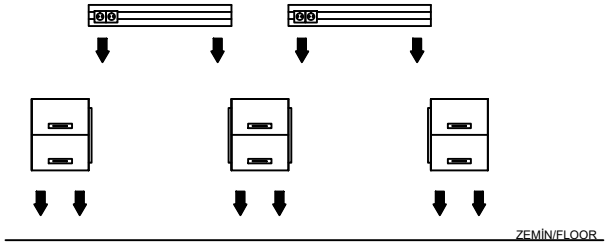

Komodin ters çevrilerek pirizlik 4x18 vida ve kelebek bağlantı ile sıkılır.

Table should be placed upside down Fix the cbinets to the lower part with 4x18 screws then fix the cabinets wıth 3,5x 30 screws


2

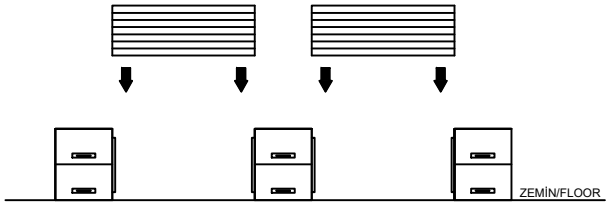

Alt kapama 3,5x50 vida ile önden sıkılır.

Screw the socket and the bottom panels with a 3.5x30 screw

3

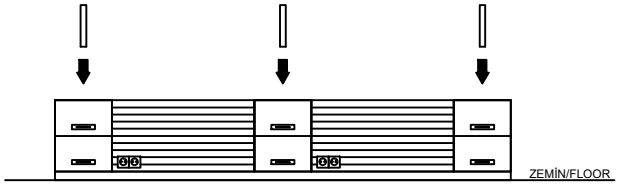


Komodin ayağına 4x25 vida ile sabitlenir. Bu aşamadan sonra tezgahı ters çevirilir

Fix the cabinet legs with 4x25 screws then then turn over the counter

4




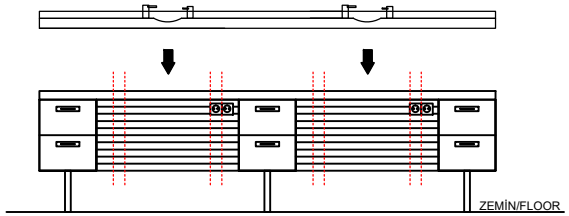

L bağlantı yerinden duvara 6x80 vida ile pullarıyla beraber montajı yapılır.
Lavabo ve tesisatların bağlantı yapılır.

Mount with 6x80 screws on the wall from the indicated L connection
Install sinks and make up plumbing connections

5

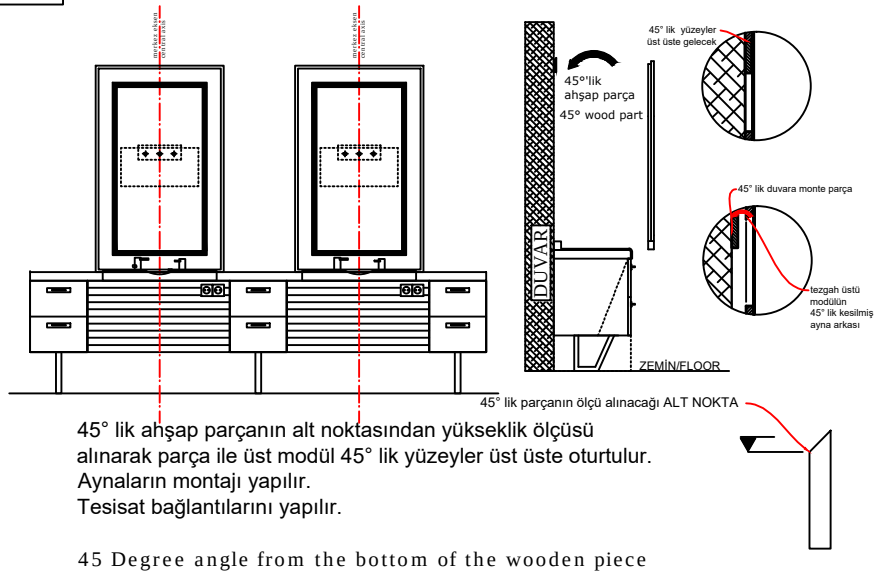

45° lik ahşap parçanın alt noktasından yükseklik ölçüsü alınarak parça ile üst modül 45° lik yüzeyler üst üste oturtulur.
Aynaların montajı yapılır.
Tesisat bağlantılarını yapılır.

45 Degree angle from the bottom of the wooden piece should be taken from the height of the upper module at a 45-degree angle of the upper modüle.Fix the mirror
Make your plumbing connections now



ALPEDA
YOUR SALON DESIGNER

ODIN ERKEK TEZGAHI_ MONTAJ ŞEMASI / ASSEMBLY DIAGRAM

ÖLÇÜLER : cm (santimetre'dir)
Çizim üstünden ölçü alınmamalıdır.
Measurements are in cm.

Tüm hakları FİLİZÇELİK AŞ.ye aittir.

PRODUCED BY AN AUTODESK EDUCATIONAL PRODUCT

PRODUCED BY AN AUTODESK EDUCATIONAL PRODUCT

PRODUCED BY AN AUTODESK EDUCATIONAL PRODUCT