
PRODUCED BY AN AUTODESK EDUCATIONAL PRODUCT


1

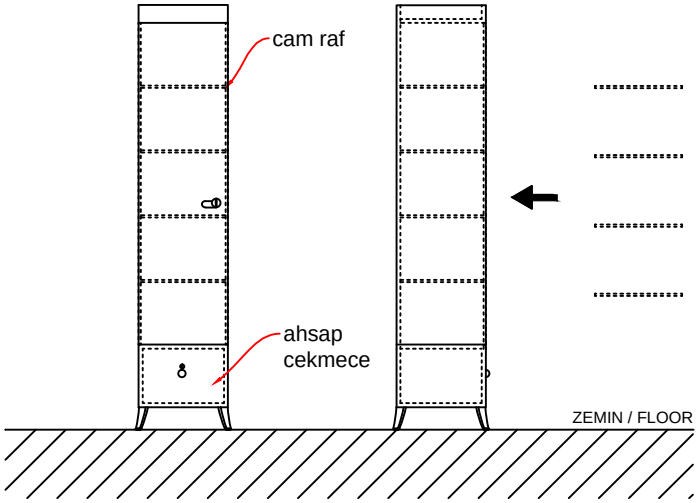

Hazır gelen dolabı zemine oturtunuz. Cam raf ve çekmeceleri yuvalarına yerleştiriniz.


Place the ready-made cabinet on the floor. Place the glass shelves and drawers in their slots.

2

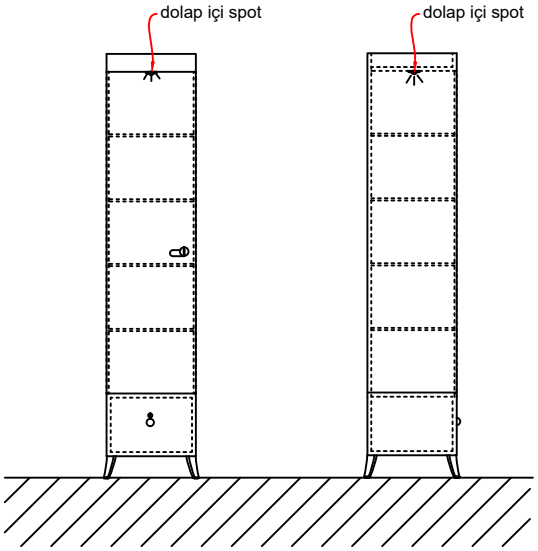

Elektrik tesisatı ve spot bağlantılarını yapınız.

Make the electrical installation and spot connections.

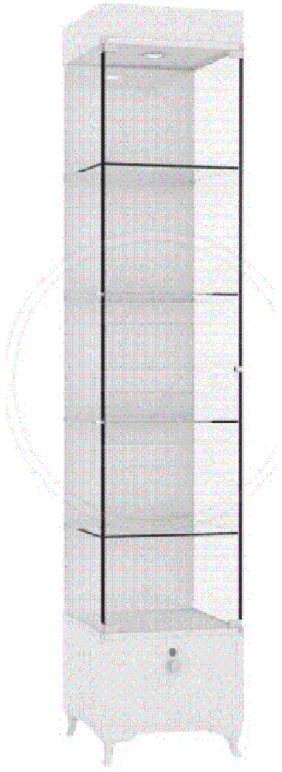

PRODUCED BY AN AUTODESK EDUCATIONAL PRODUCT

PRODUCED BY AN AUTODESK EDUCATIONAL PRODUCT

ALPEDA®
YOUR SALON DESIGNER

30207000055 - VEGA VISION_MONTAJ SEMASI

Tüm hakları FİLİZÇELİK AŞ.ye aittir.

PRODUCED BY AN AUTODESK EDUCATIONAL PRODUCT