
PRODUCED BY AN AUTODESK EDUCATIONAL PRODUCT


1

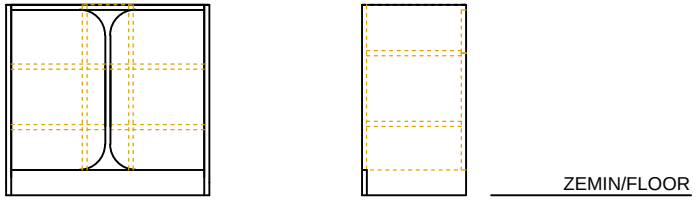

Alt dolabı zemine koyunuz.

Place the lower cabinet on the floor.

2

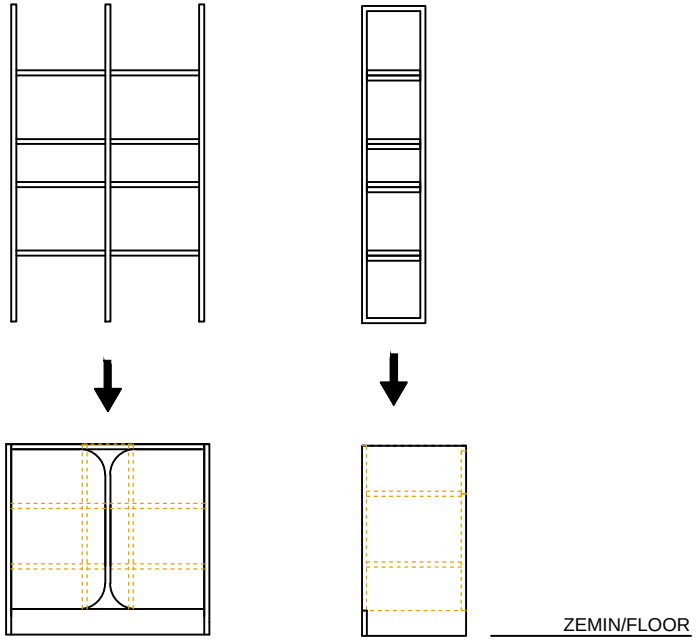

Toplu olan üst modülü, alt modüle M6x35 civata ile montajını yapınız.

Assemble the bulk upper module to the lower module with M6x35 bolts.



PRODUCED BY AN AUTODESK EDUCATIONAL PRODUCT

PRODUCED BY AN AUTODESK EDUCATIONAL PRODUCT

ALPEDA®
YOUR SALON DESIGNER

Tüm hakları FİLİZÇELİK AŞ.ye aittir.

30207000066 - BOHO VISION_MONTAJ SEMASI

PRODUCED BY AN AUTODESK EDUCATIONAL PRODUCT