
PRODUCED BY AN AUTODESK EDUCATIONAL PRODUCT


1

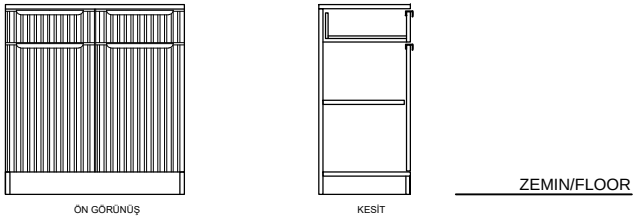

Alt dolabı zemine koyunuz.

Place the lower cabinet on the floor.


2

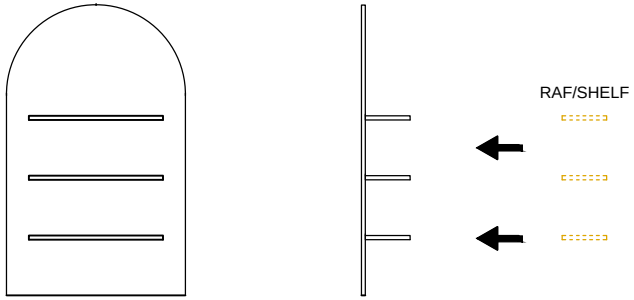

Rafları monte yerlerinden 3.5x50 vida ile arka tablaya monte ediniz.

Mount the shelves to the back plate with 3.5x50 screws from their mounting points.

3

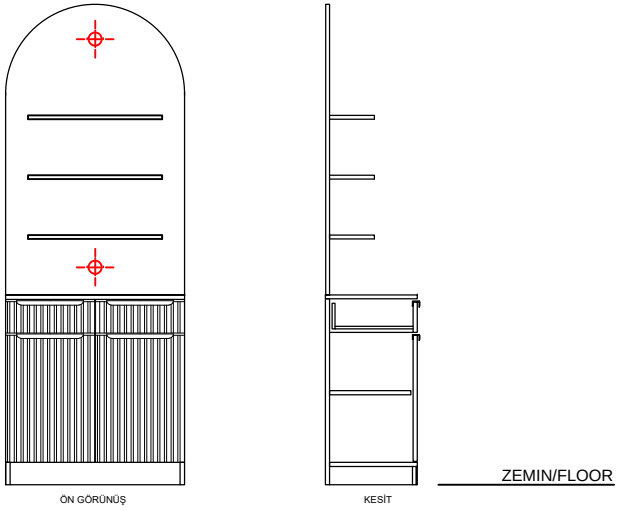

Alttan ve üstten 6x80 vida ile duvara monte edip, vida gizleme kapağın sıkınız.

Mount it to the wall with 6x80 screws from the marked places and tighten the screw hiding cover.



ALPEDA®
YOUR SALON DESIGNER

30207000068 - ROZA VISION_MONTAJ SEMASI

Tüm hakları FİLİZÇELİK AŞ.ye aittir.

PRODUCED BY AN AUTODESK EDUCATIONAL PRODUCT

PRODUCED BY AN AUTODESK EDUCATIONAL PRODUCT

PRODUCED BY AN AUTODESK EDUCATIONAL PRODUCT