
PRODUCED BY AN AUTODESK EDUCATIONAL PRODUCT

1




MODÜL BAĞLANTI ELEMANI

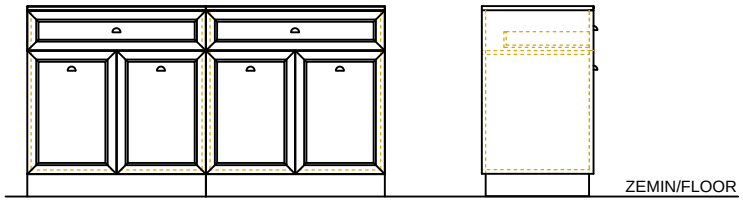


Alt dolapları yan yana koyup, modül bağlantı elemanı ile birbirine monte ediniz.

Put the lower cabinets side by side and assemble them with the module connector.

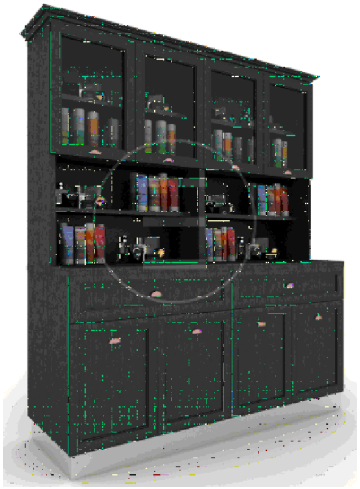

2

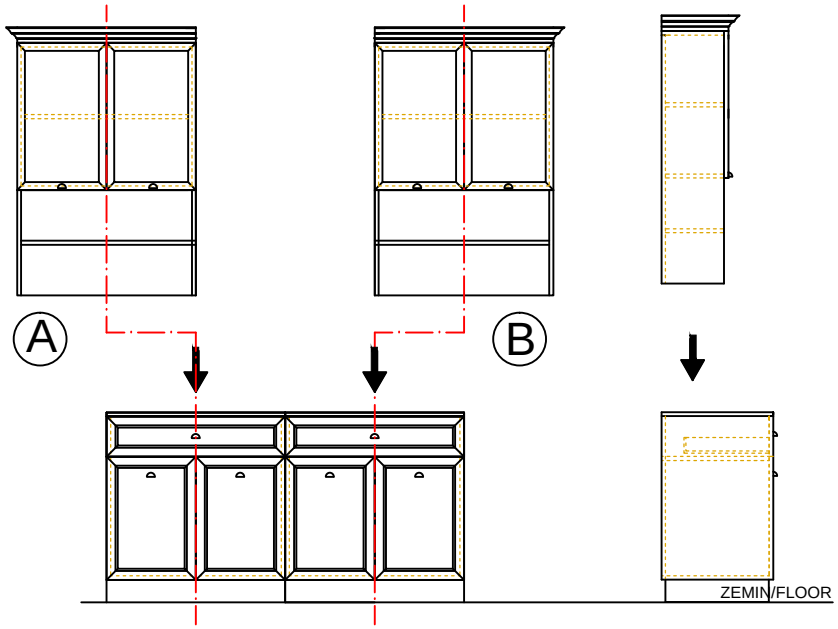


A modülünü sol modülün üstüne, B modülünü sağ modülünü üstüne oturtup, çekmeceleri çıkartıp alt modüllere içeriden 3.5x30 vida ile montajını yapınız.

Place the A module on the left module and the B module on the right module, remove the drawers and mount the submodules with 3.5x30 screws from the inside.

3



MODÜL BAĞLANTI ELEMANI

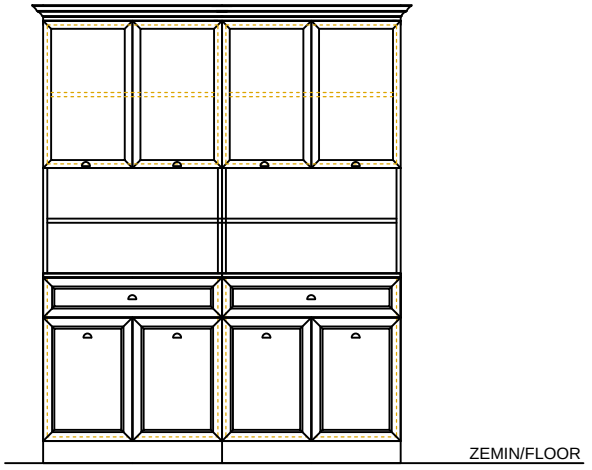

A ve B üst modlünü yan yana modül bağlantı ile monte ediniz ve montajını çekmeceleri yuvalarına yerleştirerek bitiriniz.

Mount A and B upper modules side by side with module connection and finish the assembly by placing the drawers in their slots.

PRODUCED BY AN AUTODESK EDUCATIONAL PRODUCT

PRODUCED BY AN AUTODESK EDUCATIONAL PRODUCT

ALPEDA®
YOUR SALON DESIGNER

30208000003 - CLASSIC MAN DOUBLE CABİNET_MONTAJ SEMASI

Tüm hakları FİLİZÇELİK AŞ.ye aittir.

PRODUCED BY AN AUTODESK EDUCATIONAL PRODUCT