
PRODUCED BY AN AUTODESK EDUCATIONAL PRODUCT

1

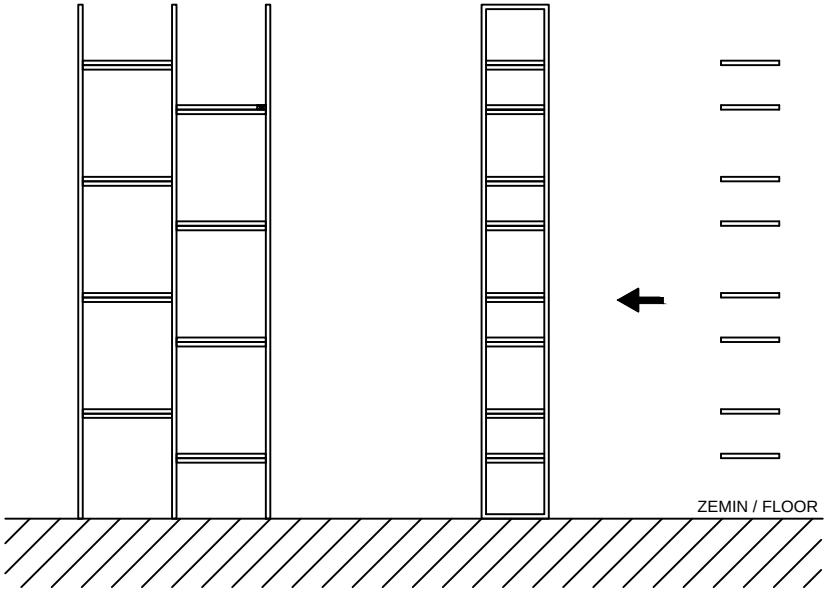



Profil raf iskeleti zemine oturtunuz. Ahşap rafları yuvalarına yerleştiriniz.

Place the profile shelf frame on the floor. Insert the wooden shelves into their slots.

PRODUCED BY AN AUTODESK EDUCATIONAL PRODUCT

PRODUCED BY AN AUTODESK EDUCATIONAL PRODUCT

ALPEDA®
YOUR SALON DESIGNER

30207000052 - STAIR İKİLİ TEŞHİR RAFI_MONTAJ SEMASI

Tüm hakları FİLİZÇELİK AŞ.ye aittir.

PRODUCED BY AN AUTODESK EDUCATIONAL PRODUCT