

PRODUCED BY AN AUTODESK EDUCATIONAL PRODUCT

1

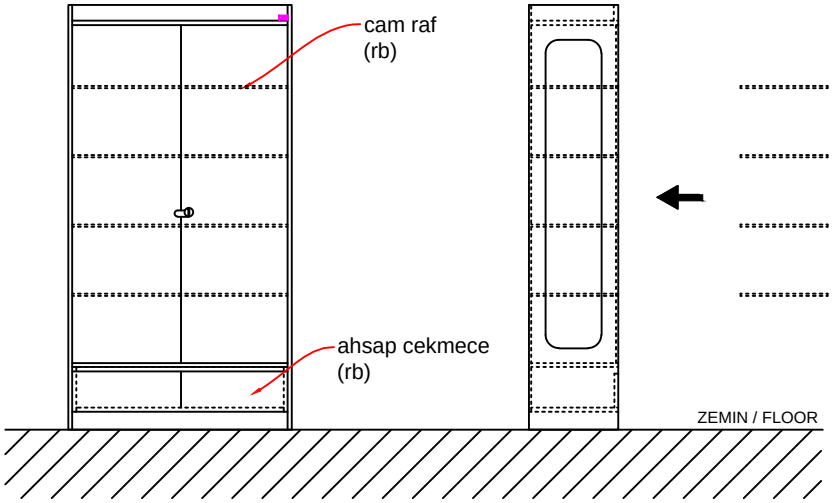

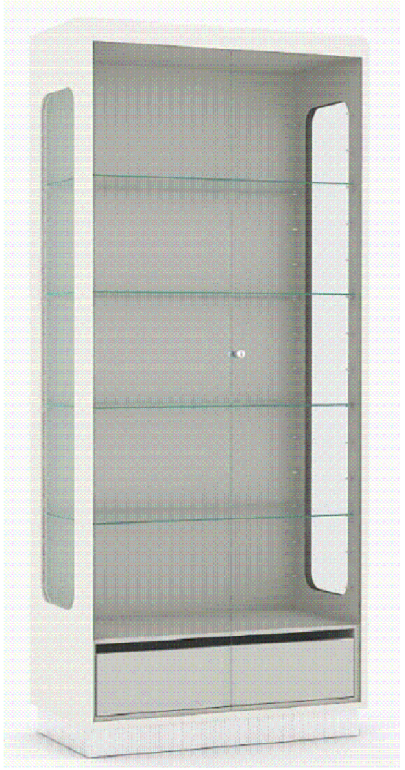

Hazır gelen dolabı zemine oturtunuz. Cam raf ve çekmeceleri yuvalarına yerleştiriniz.

Place the ready-made cabinet on the floor. Place the glass shelves and drawers in their slots.

PRODUCED BY AN AUTODESK EDUCATIONAL PRODUCT

PRODUCED BY AN AUTODESK EDUCATIONAL PRODUCT

ALPEDA®
YOUR SALON DESIGNER

30207000014 - JEWELRY DISPLAY CABINET S5_MONTAJ SEMASI

Tüm hakları FİLİZÇELİK AŞ.ye aittir.

PRODUCED BY AN AUTODESK EDUCATIONAL PRODUCT