

PRODUCED BY AN AUTODESK EDUCATIONAL PRODUCT

1

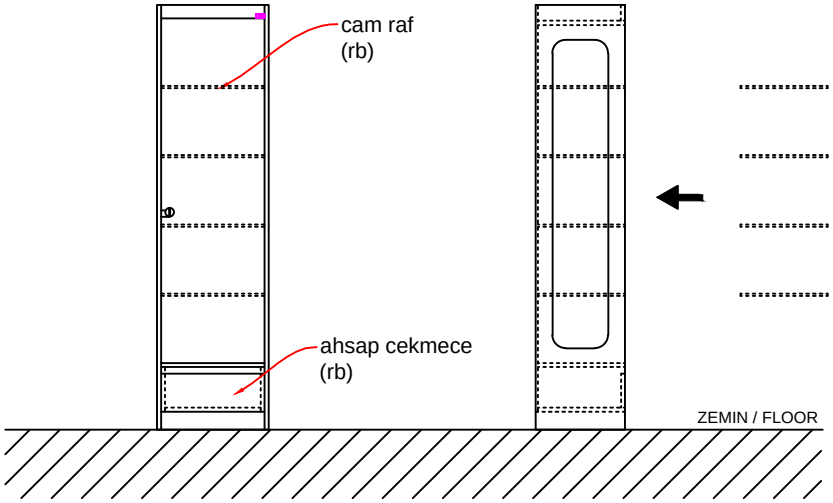

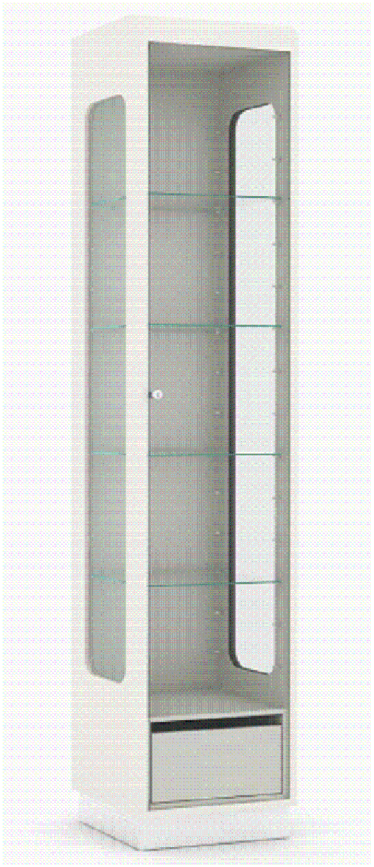

Hazır gelen dolabı zemine oturtunuz. Cam raf ve çekmeceyi yuvalarına yerleştiriniz.

Place the ready-made cabinet on the floor. Place the glass shelf and drawer in their slots.

PRODUCED BY AN AUTODESK EDUCATIONAL PRODUCT

PRODUCED BY AN AUTODESK EDUCATIONAL PRODUCT

ALPEDA®
YOUR SALON DESIGNER

30207000015 - JEWELRY DISPLAY CABINET S6_MONTAJ SEMASI

Tüm hakları FİLİZÇELİK AŞ.ye aittir.

PRODUCED BY AN AUTODESK EDUCATIONAL PRODUCT