PRODUCED BY AN AUTODESK EDUCATIONAL PRODUCT


1



Komodinler uygun konuma getirilir.

The nightstands are brought to the appropriate position.


2

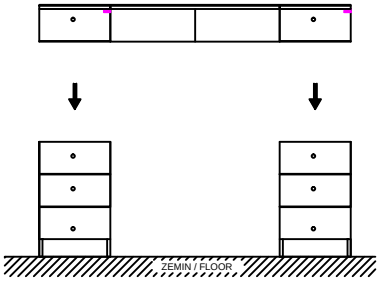

Üst tablayı komodin üstüne oturtup dış yanlardan sıfır olacak şekilde komodinlerden tablaya 8 Adet 3,5x30 vida ile montajını yapınız.

Place the top table on the nightstand and assemble it from the nightstands to the table with 8 pieces of 3,5x30 screws so that it is zero from the outer sides.


3

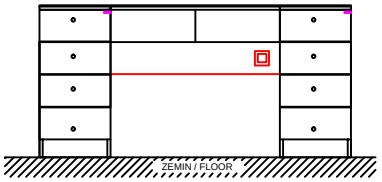



Prizlik (ara parça) yerine oturtulup L demirlerden 8 Adet 3,5x30 vida ile bağlayınız.


Place the socket (spacer) in place and connect it with 8 pieces of 3.5x30 screws from L irons.

4



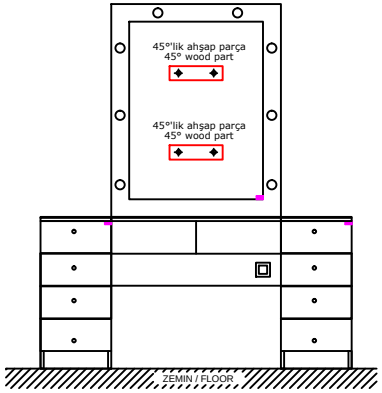

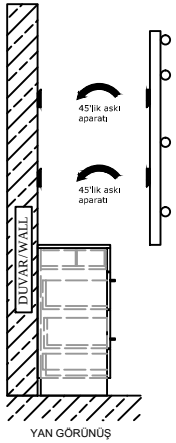

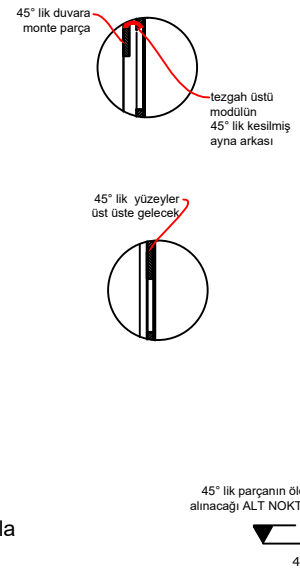



Alt modülü topladıktan sonra, aynayı askı 45'lik parça ile 4 Adet 6x80 vidayla montajını yapınız.

After assembling the submodule, mount the mirror with a 45 piece hanger and 4 6x80 screws.

ALPEDA
YOUR SALON DESIGNER

Tüm hakları FİLİZÇELİK AŞ.ye aittir.

ALICE MAKYAJ TEZGAHI_MONTAJ SEMASI

PRODUCED BY AN AUTODESK EDUCATIONAL PRODUCT

PRODUCED BY AN AUTODESK EDUCATIONAL PRODUCT

PRODUCED BY AN AUTODESK EDUCATIONAL PRODUCT