

PRODUCED BY AN AUTODESK EDUCATIONAL PRODUCT

1




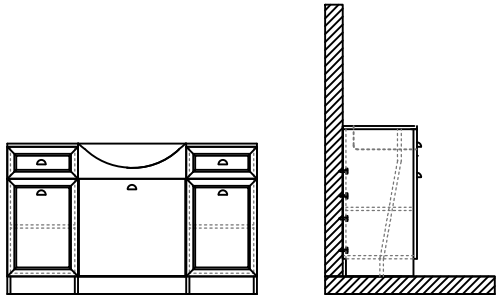

Toplu olan lavabosuz alt bölümü duvara ünitenin içinden 6x80 vida ile vidalayıp sabitlenir.

Fix the bottom of the unit to the wall with 6x80 screws from the inside.


2

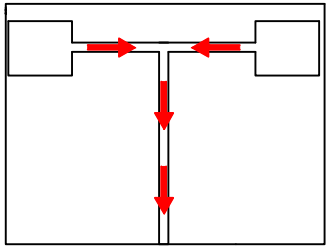

Aplik kablosu kanaldan tezgah boşluk kısmına geçirilir.

The sconce cable is passed through the channel to the bench space.


3

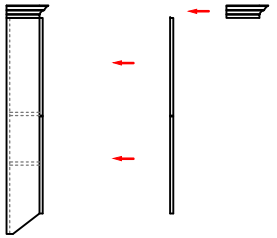



Arka panoya, dolap kapakları ve üst tacı sıkılır.


The rear panel, cabinet doors and top crown are tightened.

4

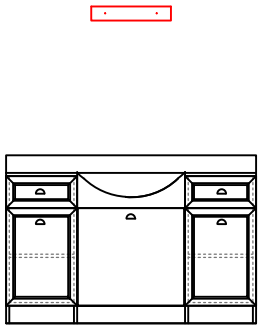

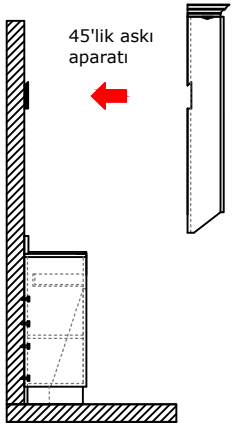

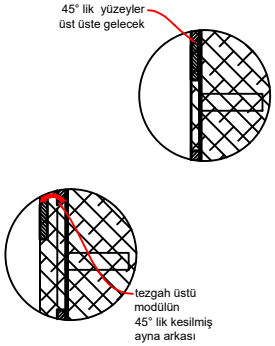


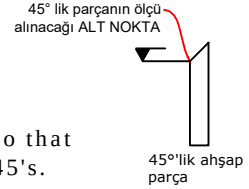


45 lik askı aparatı duvara aynanın tam oturacağı şekilde ölçüp duvara monte edilir. Ayna gövdesi 45'liklerden duvara asılır.

The 45 cm hanging bracket is measured and mounted on the wall so that the mirror fits perfectly. The mirror body is hung on the wall from 45's.

5

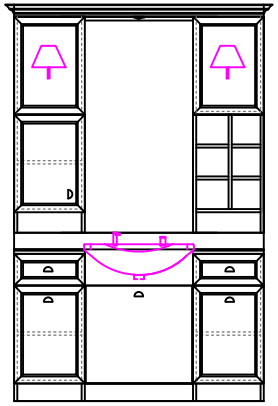

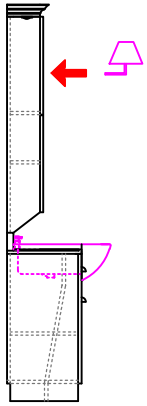



En son olarak lavabo ve aplikler tezgaha monte edilir. Elektrik ve su tesisatı yapılarak montaj tamamlanır.

Finally, the sink and wall lamps are mounted on the counter. The installation is completed by installing electrical and water installations.

ALPEDA®
YOUR SALON DESIGNER

30201000130 - CASUAL MAN ERKEK TEZGAHI-MONTAJ SEMASI

Tüm hakları FILIZÇELIK AŞ.ye aittir.

PRODUCED BY AN AUTODESK EDUCATIONAL PRODUCT